

Phazr-5 Remote
QUICK REFERENCE GUIDE







Contact us
1.877.HARGRAY | hargray.com
















KEY CONTROLS

Device Control

Used to select the component you want to operate and signals remote control activity.









-  Turns devices **ON/OFF**
-  Enables **AUD** mode functions
-  Enables **TV** mode functions
-  Enables **CBL** mode functions

Viewing, Browsing & Sound Control







-  Displays the program **GUIDE** listings
-  Displays the applications **MENU**
-  **INFO** displays information about the program currently playing or highlighted in the program guide
-  **EXIT** from current screen
-  **OK/SELECTS** highlighted screen options
-  **CURSOR NAVIGATION PAD** navigates to and highlights an item from the onscreen choices
-  **PAGE +/-** accesses pages above or below the information currently displayed
-  Accesses the **SEARCH** menu for Scientific Atlantic/Cisco STB
-  Accesses the **SEARCH** menu for Pace STB
-  **VOLUME** raises or lowers the sound level
-  **LAST** returns to the previously tuned channel
-  **MUTE** silences the audio; press to activate, press again to restore sound to the previous level
-  **CHANNEL** selects the next higher or lower channel

On-Demand Control

Perform standard VCR and DVD functions when in VCR and DVD mode, and On-Demand functions when in cable mode.

-  **ON-DEMAND** provides direct access to On-Demand channel
-  **REPLAYS** the previous few seconds of a program
-  **MY DVR** displays a list of programs you have recorded, allowing you to select one for viewing
-  **REW** rewinds 7 seconds, and **FF** fast-forwards
-  **PLAYS** On-Demand or recorded content
-  **STOPS** On-Demand or recorded content
-  **PAUSES** On-Demand or recorded content
-  **RECORDS** the selected program

Numeric Keys

-  Enter numbers to tune to channels. Also, make numeric entries on on-screen menus.
NOTE: You can also use Channel  or the program guide as alternative ways to tune to channels
-  **DELETE** removes, cancels or erases
-  **ASPECT/ENTER** changes the HD screen viewing aspect ratio through the cable STB
-  **VIDEO SOURCE** selects the video source from available video components through the cable STB
-  **LIGHT BUTTON** backlights all keypad buttons; press again to turn off (or simply wait 10 seconds for automatic shut-off)